

Front AIS spigot removal

By Joe Hawrysch

http://www.nopork.com/shop_product.asp?id=AIS120&bkmn=Yamaha+V%2DStar



AIS Smog Plugs for Yamaha Stars

for Yamaha V-Star, Yamaha Roadstar
Fitment: Not for 2004 ROADSTAR

Roadstar 1600 99-03 and Vstar (1100 and 650) 99-04

Clean up the left side of your Yamaha Roadstar, eliminate that big ugly nasty smog canister and remove those ugly black hoses as well.

Smog canister removal plugs, Designed and manufactured to clean up the look of the big 1602 V-Twin motor (makes it look pretty). It will eliminate all the smog equipment that you don't really need.

This kit will enhance the look of the left side and front of the bike greatly (contains 2 plugs).

(not legal in some states, check with your local and environmental laws prior to tampering with the emissions control system. blah blah blah, you know what this is for and how to use it. So buy it.)

[Roadstar](#) Installation Instructions


[Vstar](#) Installation Instructions



1- This is what you need, with the no pork plug cut at the same length of the spigot, to replicate how it was.



2- Where you place the flat part of the screw driver hits the spigot.

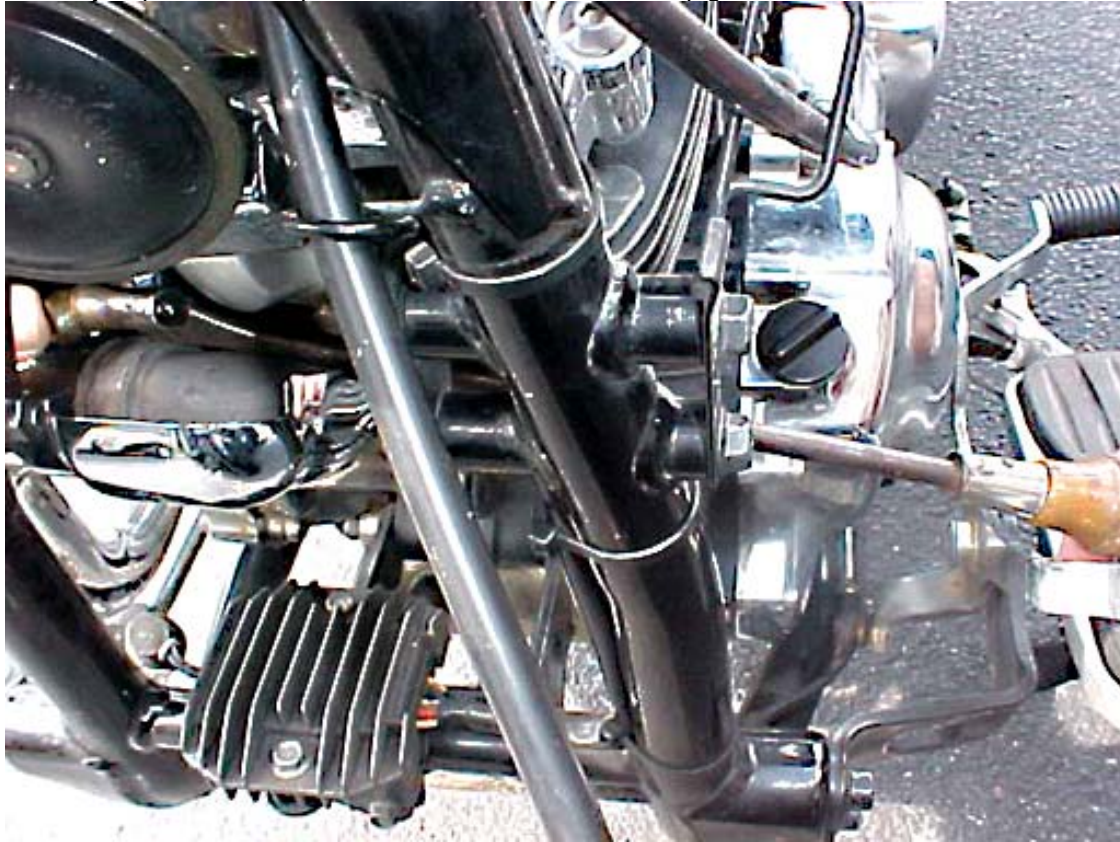

3- Examples where you drive through and place the screw driver.



4-With the No-Pork plug installed

