

Jardine Oil Relocation Kit of the V-Star 650

By CPT David Gann



1. Before



2. Drain oil



3. Remove Pipe



4. Remove Pipe



5. Remove Floor board



6. Remove cover



7. Cover removed



8. Cover removed



9. Cover and bolts



10. Cover with O-ring




11. Removing O-ring



12. Installing O-ring



13. Remove filter

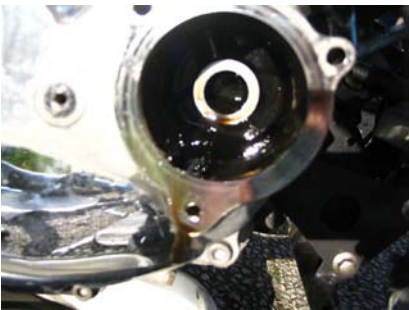

14. Filter removed



15. Long end toward motor



16. Install cylinder



17. Cylinder installed



18. New adapter cover installed



19. Fittings installed



20. Filter



21. Before new filter



22. New Filter Installed



23. Install complete